



Fig. 01

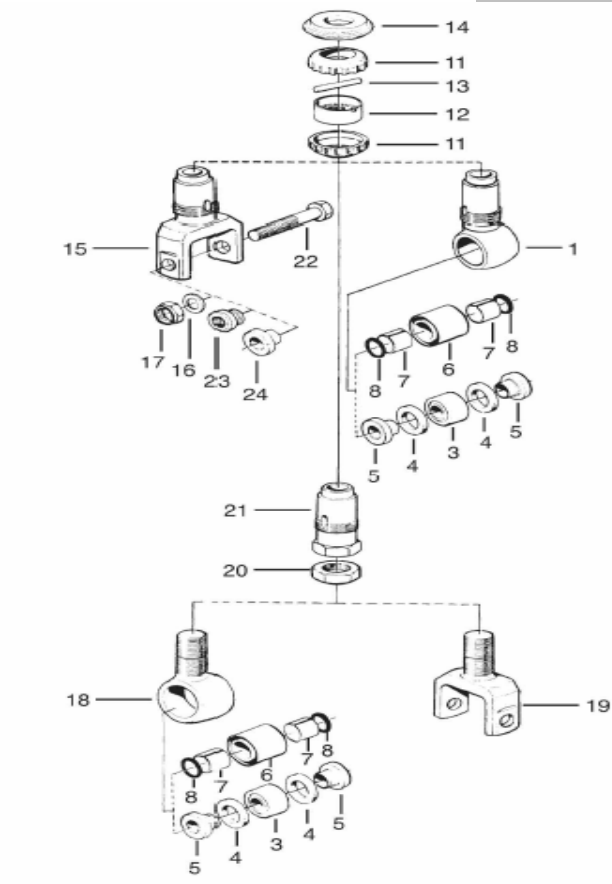

BMW R 1200 GS			46ER1 BM 437	46ER1 BM 509
Fig No.	Part No	Description	Qty	
01-01	01054-22	End eye	1	1
01-03	00536-02	Balljoint	1	1
01-04	00534-01	Seal	2	2
01-05	01218-12	Spacer	2	2
01-11	01016-01	Seal rebound adjuster	2	2
01-12	01128-01	Adjustment knob	1	1
01-13	01030-01	Pin	1	1
01-14	01017-01	Stop washer	1	1

Fig.02

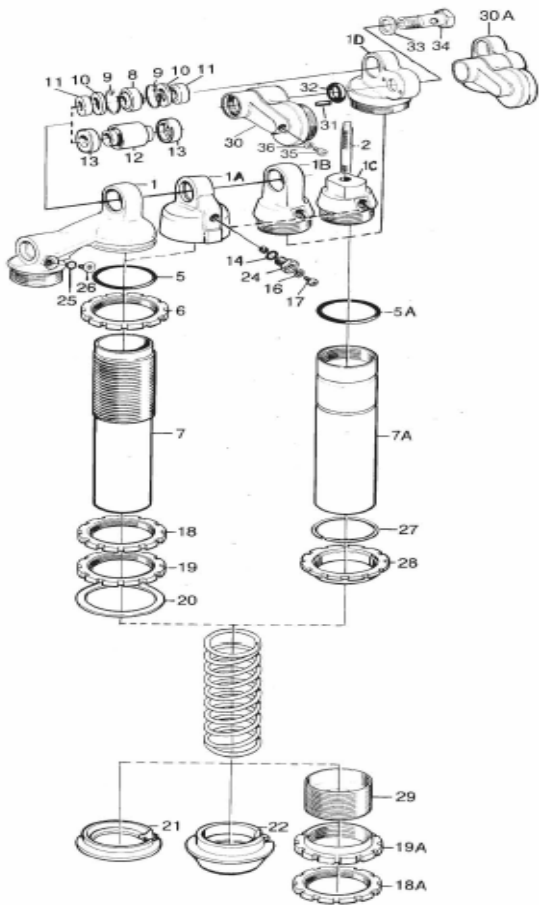

 

BMW R 1200 GS			46ER1 BM 437	46ER1 BM 509	
Fig No.	Part No	Description	Qty		
Body tube					
	02-01B	01281-02	Cylinder head	1	1
	02-02	00441-01	Stud bolt	1	1
	02-05A	00338-32	O-ring	1	1
	02-07A	04211-13	Cylinder tube	1	1
	02-14	00338-07	O-ring	1	1
	02-16	00338-59	O-ring	1	1
	02-17	01050-01	Screw	1	1
	02-18	00532-01	Lock nut	1	1
	02-19	00531-01	Spring platform	1	1
	02-20	00543-01	Washer	1	1
	02-22	00629-01	Spring clip	1	1
	02-24	00603-03	Valve assy	1	1
		01096-10	Spring	1	1
		00196-01	Sticker Varning	1	1

Fig. 03

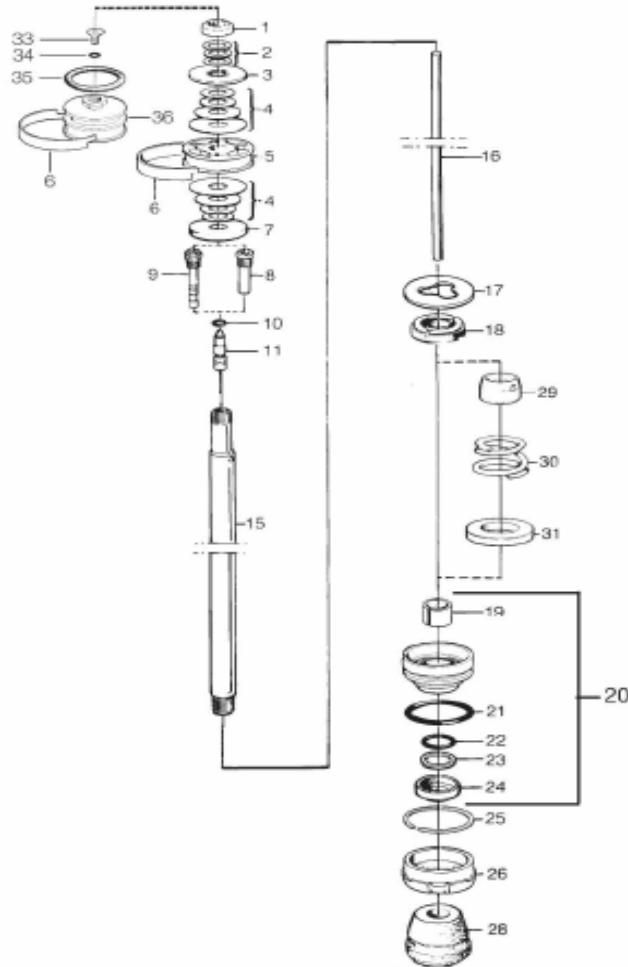

BMW R 1200 GS			46ER1 BM 437	46ER1 BM 509
Fig No.	Part No	Description	Qty	
Shaft				
03-01	00539-01	Lock nut	1	1
03-02	00578-01	Washer	5	5
03-03	00519-07	Stop washer	1	1
03-05	01114-14	Piston	1	1
03-06	00541-01	Piston ring	1	1
03-07	00519-08	Stop washer top out	1	1
03-08	05621-03	Valve	1	1
03-10	00338-14	O-ring	1	1
03-11	05655-03	Adjustment needle	1	1
03-15	05500-10	Shaft	1	1
03-16	00566-60	Adj.shaft	1	1
03-17	01069-03	Spacer		4
03-18	05115-01	Stop rubber	1	1
03-19	01056-13	Bushing	1	1
03-20	05129-04	Seal head assy	1	1
03-21	00576-01	O-ring	1	1
03-22	01027-01	X-ring	1	1
03-23	01032-01	Back-up ring	1	1
03-24	01031-02	Scraper	1	1
03-25	00575-01	Circlip	1	1
03-26	01065-02	End cap	1	1
03-28	00563-03	Bump rubber	1	1
03-29	01132-02	Spring guide	1	1
03-30	01131-01	Spring	1	1
03-31	01269-02	Spacer	1	1