


This exploded view diagram illustrates the assembly of a mechanical component, likely a valve or actuator. The parts are numbered as follows:

- Top Section:** A vertical stack of components including a cap (14), a gear-like ring (11), a spacer or seal (13), a central shaft or pin (12), and another gear-like ring (11).
- Left Side Assembly:** Features a bracket (15) and a bolt (22). Below them are four small fasteners: two screws (17, 16) and two nuts (23, 24).
- Right Side Assembly:** Shows a main body (1) with a flange. It includes a series of internal components: a pin (8), a sleeve (7), a bush (6), and a nut (8). Below these are four small fasteners: two screws (5, 4) and two nuts (3, 4).
- Central Section:** A vertical shaft (21) with a flange (20) at the bottom.
- Bottom Section:** Includes a bracket (18) on the left and a bracket (19) on the right. Between them is a series of internal components: a pin (8), a sleeve (7), a bush (6), and a nut (8). Below these are four small fasteners: two screws (5, 4) and two nuts (3, 4).


	<i>S36DR1</i>	<i>Harley Davidson FX-D</i>	<i>HD 8170</i>
<i>Fig No.</i>	<i>Part No</i>	<i>Description</i>	
End eye			
01-01	03158-01	End eye	1
01-06	00124-10	Rubber bushing	1
01-11	01016-01	Seal rebound adjuster	2
01-12	01128-01	Adjustment knob	1
01-13	01030-01	Pin	1
01-14	03117-01	Stop washer	1

Fig.02

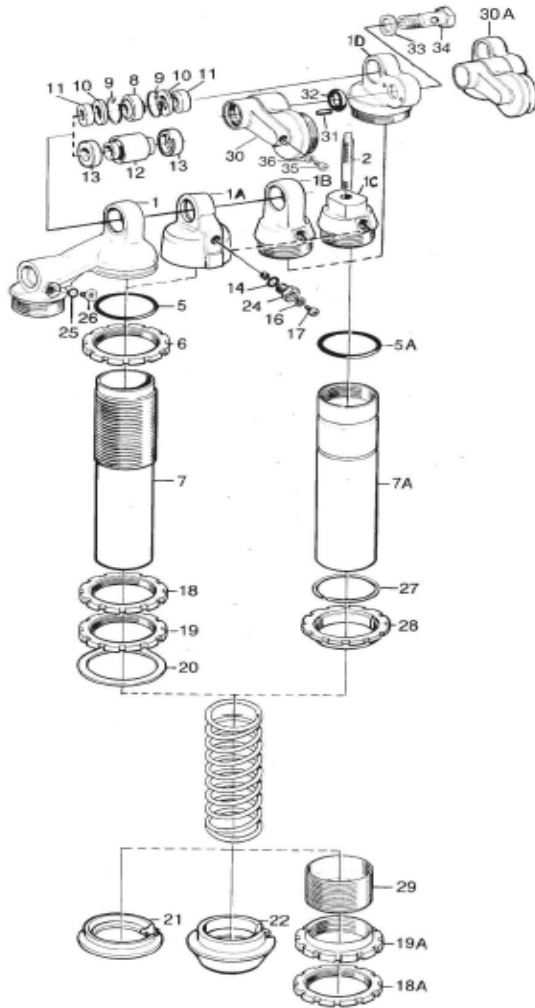

	S36DR1	Harley Davidson FX-D	HD 8170
Fig No.	Part No	Description	
Body tube			
02-00	00191-48	Sticker Öhlins	1
02-00	00196-15	Sticker Warning	1
02-01	00201-22	Cylinder head	1
02-05	00338-02	O-ring	1
02-07	04300-19	Cylinder tube	1
02-12	00124-10	Rubber bushing	1
02-14	00338-07	O-ring	1
02-16	00338-59	O-ring	1
02-17	01050-01	Screw	1
02-19	03251-03	Spring seat	1
	05410-02	Stop screw spring seat	1
02-21	00116-04	Spring clip	1
02-24	00603-03	Valve assy	1
	00417-02	Support sleeve cylinder tube	1
	21180-01	Main spring	1

Fig.03

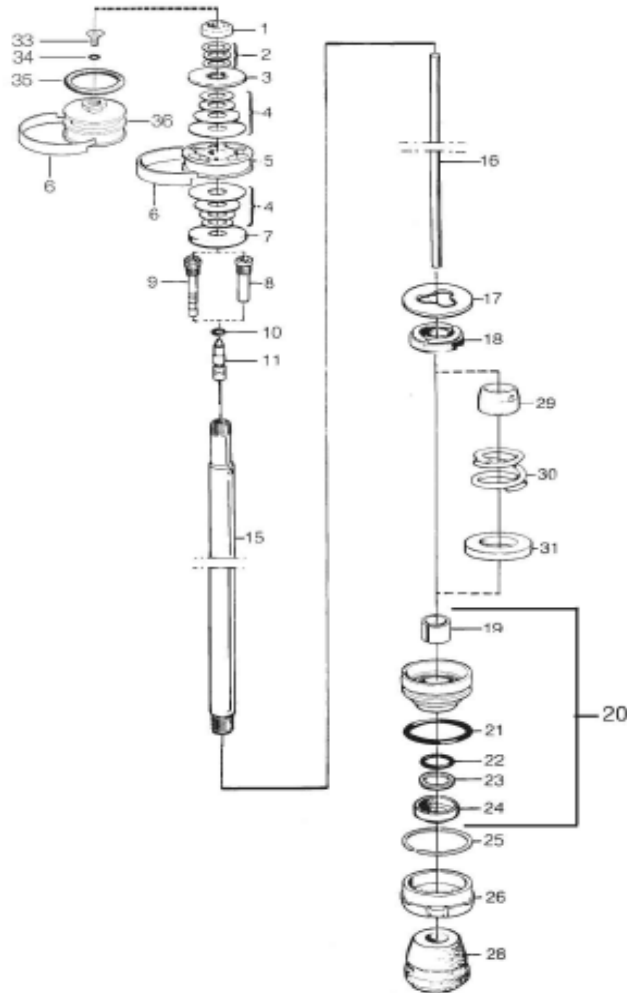

	S36DR1	Harley Davidson FX-D	HD 8170
Fig No.	Part No	Description	
Shaft			
03-01	00539-01	Lock nut	1
03-02	00578-01	Washer	1
03-03	00519-07	Stop washer	1
03-05	03077-02	Piston	1
03-06	03078-01	Piston ring main piston	1
03-06	00141-01	Pistonring reservoir piston	1
03-07	00519-11	Stop washer	1
03-08	00672-04	Shaft jet	1
03-10	00338-14	O-ring	1
03-11	01055-03	Adjustment needle	1
03-15	03062-09	Shaft	1
03-16	03566-22	Adj.shaft	1
03-17	03269-02	Spacer	1
03-18	03067-02	Stop rubber	1
03-19	01056-12	Bushing	1
03-20	03164-06	Seal head assy	1
03-21	00338-09	O-ring	1
03-22	04717-02	Seal	1
03-23	01032-09	Back-up ring	1
	04729-02	Shim	1
03-24	03070-02	Scraper	1
03-25	00128-01	Circlip	1
03-26	03065-02	End cap	1
03-28	03063-01	Bump rubber	1
03-31	04752-02	Washer seal head.	1
03-33	00382-01	Screw	1
03-34	00338-01	O-ring	1
03-35	00338-28	O-ring	1
03-36	00305-03	Reservoir piston	1

