



Fig.01

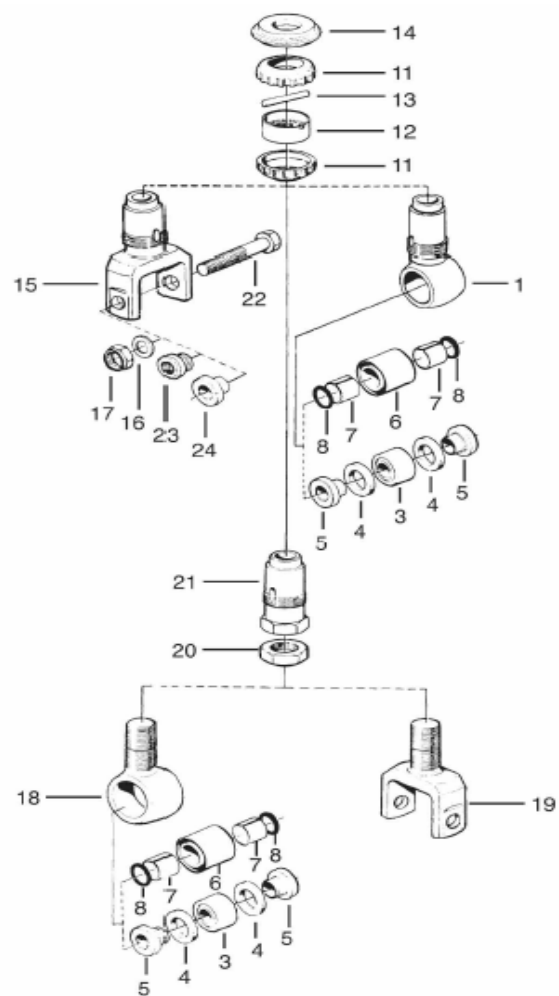


	S46HR1C1S	HONDA XRV 750	HO 645
Fig No.	Part No	Description	Qty
End eye			
01-11	01016-01	Seal rebound adjuster	2
01-12	01128-01	Adjustment knob	1
01-13	01030-01	Pin	1
01-14	01017-01	Stop washer	1
01-15	01052-25	End bracket	1
01-23	00673-03	Tread insert	1

Fig.02

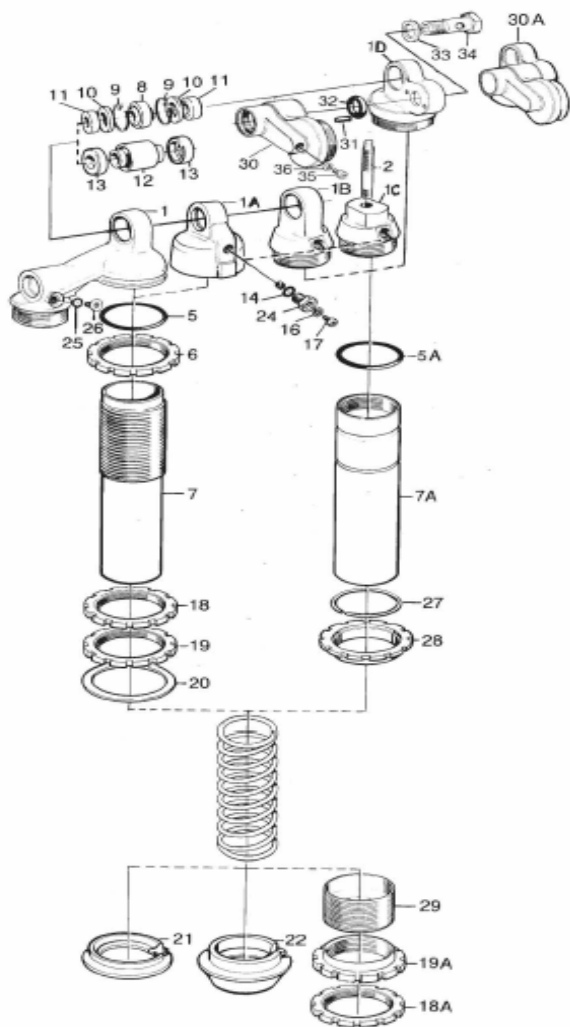

	S46HR1C1S	HONDA XRV 750	HO 645
Fig No.	Part No	Description	Qty
Body tube			
02-01A	00570-01	Cylinder head	1
02-05A	00338-37	O-ring	1
02-07A	04210-02	Cylinder tube	1
02-08	00536-12	Ball joint	1
02-10	00534-01	Seal ball joint	2
02-11	01018-12	Spacer, ball joint	2
02-20	00543-01	Washer	1
02-21	00516-01	Spring clip	1
	01096-26	Spring	1

Fig.03

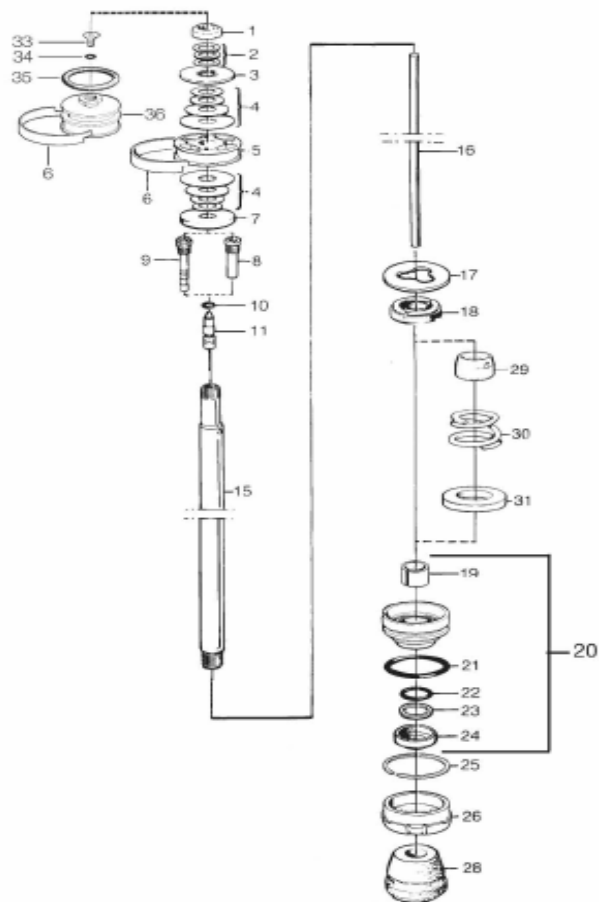


	S46HR1C1S	HONDA XRV 750	HO 645
Fig No.	Part No	Description	Qty
Shaft			
03-01	00539-01	Lock nut	1
03-02	00578-01	Washer	2
03-03	00519-05	Stop washer	1
03-05	01114-14	Piston	1
03-06	00541-01	Piston ring	1
03-07	00519-04	Stop washer	1
03-08	05621-04	Valve	1
03-10	00338-14	O-ring	1
03-11	05655-04	Adjustment needle	1
03-15	05500-18	Shaft	1
03-16	03566-05	Adj.shaft	1
03-17	01069-03	Spacer	2
03-18	00815-01	Stop rubber	1
03-19	01056-01	Bushing	1
03-20	01029-02	Seal head assy	1
03-21	00576-01	O-ring	1
03-22	01027-01	X-ring	1
03-23	01032-01	Back-up ring	1
03-24	01031-02	Scraper	1
03-25	00575-01	Circlip	1
03-26	01065-01	End cap	1
03-28	00563-02	Bump rubber	1

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or valve. The parts are numbered as follows:

- 1, 2, 3:** Small fasteners or pins at the base.
- 4:** A circular gasket or seal.
- 5:** A large circular flange or base plate.
- 6:** A small pin or screw passing through the flange.
- 7:** A small circular component on the pin.
- 8:** The main vertical cylindrical body.
- 9:** A small L-shaped bracket.
- 10:** A circular ring or collar.
- 11, 12, 13, 14:** A series of stacked rings or seals.
- 15:** A small pin or screw.
- 16:** A small circular component.
- 17:** A small pin or screw.
- 18:** A hexagonal nut or cap.
- 19:** A small L-shaped bracket.
- 20:** A small circular component.
- 21:** A small pin or screw.
- 22:** A small circular component.
- 23:** A small pin or screw.
- 24:** A small circular component.
- 25:** A small pin or screw.
- 26:** A small circular component.
- 27:** A small pin or screw.
- 28:** A small circular component.
- 29:** A small pin or screw.
- 30:** A small circular component.
- 31:** A small pin or screw.
- 32:** A small circular component.
- 33:** A small pin or screw.
- 34:** A small circular component.
- 35:** A small pin or screw.
- 36:** A small circular component.
- 37:** A small pin or screw.
- 38:** A small circular component.
- 39:** A small pin or screw.
- 40:** A small circular component.
- 41:** A small pin or screw.
- 42:** A small circular component.
- 43:** A small pin or screw.
- 44:** A small circular component.
- 45:** A small pin or screw.
- 46:** A small circular component.
- 47:** A small pin or screw.
- 48:** A small circular component.
- 49:** A vertical rod or shaft.
- 50:** A small cylindrical component.
- 51:** A large curved plate or cover.
- 52:** A small circular component.


	S46HR1C1S	HONDA XRV 750	HO 645
Fig No.	Part No	Description	Qty
Reservoir			
04-01	01050-01	Screw	1
04-02	00338-59	O-ring	1
04-04	00329-01	Circlip	1
04-05	00161-03	Reservoir top assy	1
04-07	00338-04	O-ring	1
04-08	00302-01	Reservoir	1
04-10	00643-02	Hose clamp stainless	2
04-11	00340-01	Teflon band	1
04-12	00338-26	O-ring	1
04-13	00305-01	Reservoir piston	1
04-14	00338-24	O-ring	1
04-18	00862-02	Reservoir end	1
04-00	00191-06	Sticker "ÖHLINS" blue/transp	1
04-00	00196-01	Sticker "Warning"black/transp 17x53	1
04-36	00637-20	Hose	1
04-37	00631-01	Banjo bolt	1
04-38	00586-01	Seal washer	4
04-44	00631-02	Banjo bolt	1
04-45	00438-33	O-ring	1
04-46	00382-07	Screw	1

Fig.05

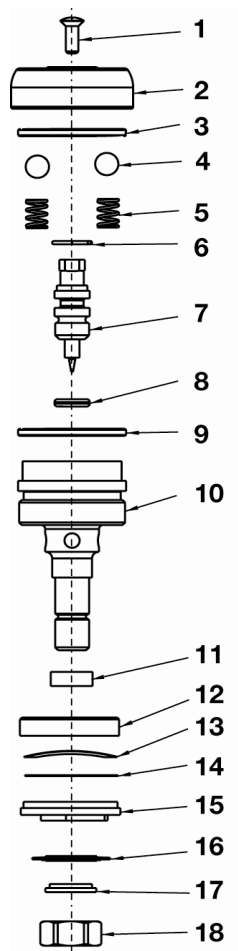

	S46HR1C1S	HONDA XRV 750	HO 645
Fig No.	Part No	Description	Qty
Compr. Valve			
05-01	00828-01	Screw	1
05-02	00820-02	Knob	1
05-04	00884-07	Ball	2
05-05	00833-01	Spring	2
05-06	01473-06	Circlip	1
05-07	01242-06	Adjustment needle	1
05-08	00338-79	O-ring	1
05-09	00338-27	O-ring	1
05-10	01243-08	End piece	1
05-12	01247-01	Check valve housing	1
05-13	01246-01	Wave washer	1
05-14	01245-01	Check valve shim	1
05-15	01244-05	Valve	1
05-16		Shims see spec.card	1
05-17	00641-01	Washer	1
05-18	00430-07	Nut	1

Fig.06

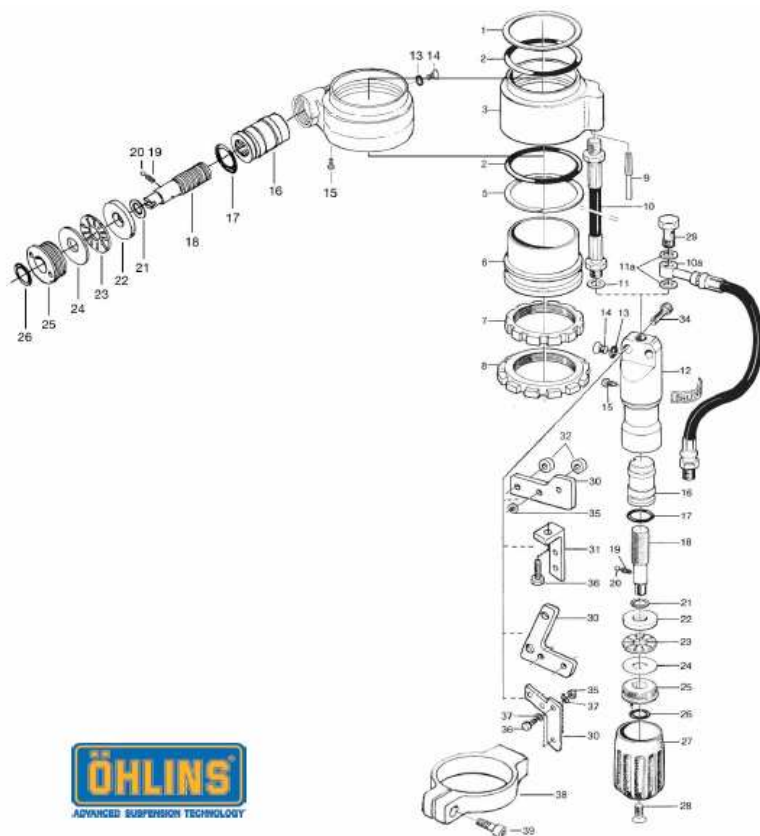

	S46HR1C1S	HONDA XRV 750	HO 645
Fig No.	Part No	Description	Qty
Preload adj.			
06-01	03611-01	Support ring	1
06-02	00338-90	O-ring	2
06-03	03607-01	Preload housing	1
06-05	03610-01	Support ring	1
06-06	03606-01	Inner sleeve	1
06-07	03609-01	Lock nut	1
06-08	03608-01	Guide nut	1
06-09	03613-01	Pin	1
06-10	01047-05	Hose	1
06-11A	01048-01	Seal washer	1
06-12	03600-01	Adj.cylinder	1
06-13	00338-79	O-ring	1
06-14	00382-07	Screw	1
06-15	03601-02	Guide screw	1
	03614-01	Seal washer	1
06-16	03604-01	Piston	1
06-17	00338-89	O-ring	1
06-18	03602-01	Adj. screw	1
06-19	03083-01	Spring	1
06-20	00884-03	Ball	1
06-21	00131-03	Circlip	1
06-22	03072-02	Thrust washer	1
06-23	01023-02	Thrust needle bearing	1
06-24	03073-02	Thrust washer	1
06-25	03603-01	Cover	1
06-26	00338-88	O-ring	1
06-27	03605-01	Knob	1
06-28	00382-08	Screw	1
06-30	01084-03	Bracket	1
06-34	05404-06	Screw M6x25	2
06-35	00430-02	Nut M6	2
06-36	01046-21	Screw M8x40	1
06-37	00153-04	Washer	2
	00191-06	Sticker Öhlins	1