



Fig. 01

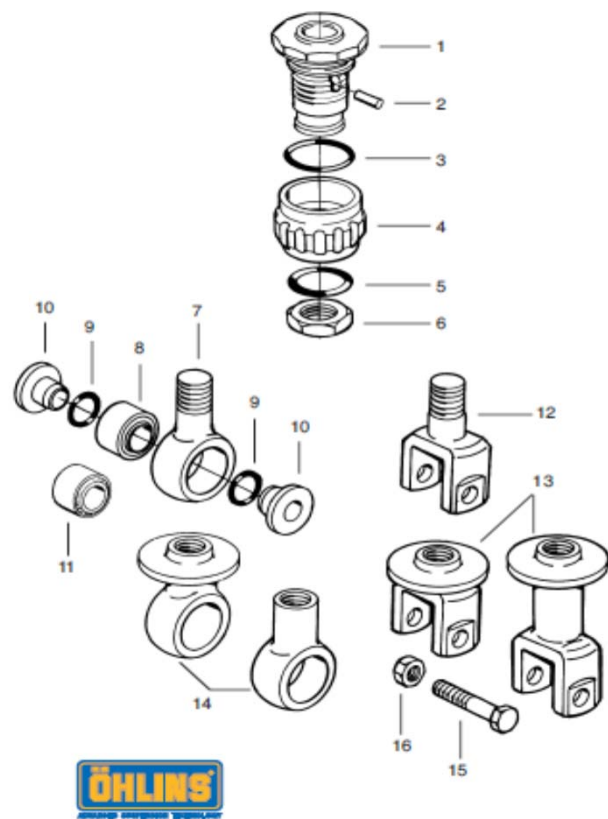


	S36DR1L	TRIUMPH Thruxton	TR 5381
Fig No.	Part No	Description	
End eye			
01-01	03058-01	Shaft extension	1
01-02	01030-07	Pin	1
01-03	00338-83	O-ring Reb.adjuster lower	1
01-04	03057-01	Adjustment knob	1
01-05	00338-25	O-ring Reb.adjuster upper	1
01-06	03059-01	Nut	1
01-07	03061-12	End eye	1
01-08	00124-15	Rubber bushing	1

Fig.02

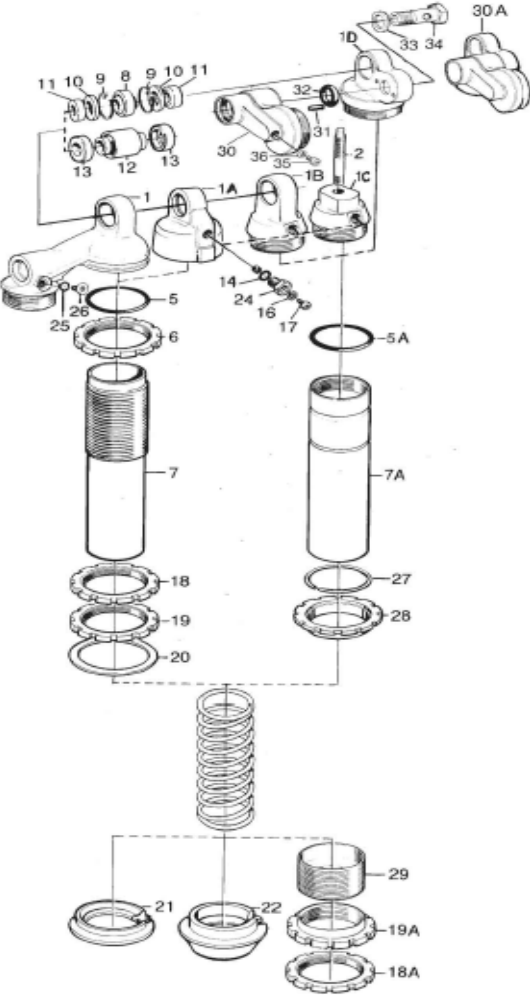

	S36DR1L	TRIUMPH Thruxton	TR 5381
Fig No.	Part No	Description	
Body tube			
02-00	00191-13	Sticker Öhlins	1
02-00	00196-01	Sticker Warning	1
02-01A	00201-08	Cylinder head	1
02-05	00338-02	O-ring	1
02-07	04300-20	Cylinder tube	1
02-12	00124-15	Rubber bushing	1
02-14	00338-07	O-ring	1
02-16	00338-59	O-ring	1
02-17	01050-01	Screw	1
02-18	00155-02	Lock nut	1
02-19	00154-02	Spring seat	1
02-21	00116-04	Spring clip	1
02-24	00603-03	Valve assy	1
	00417-02	Support sleeve	1
	00480-03	Spring	1

Fig.03

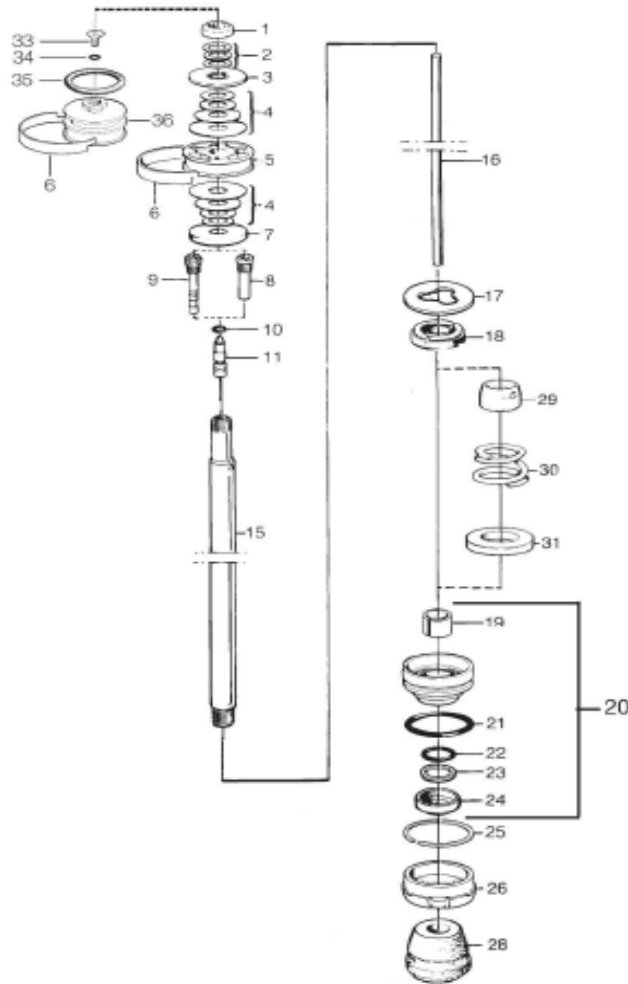

	S36DR1L	TRIUMPH Thruxton	TR 5381
Fig No.	Part No	Description	
Shaft			
03-01	00539-01	Lock nut	1
03-02	00578-01	Washer	1
03-03	00519-07	Stop washer	1
03-05	03077-01	Piston	1
03-06	03078-01	Piston ring main piston	1
03-06	00141-01	Pistonring reservoir piston	1
03-07	03068-01	Stop washer	1
	00436-01	Circlip for stop washer	1
03-08	01021-03	Shaft jet	1
03-10	00338-14	O-ring	1
03-11	01055-03	Adjustment needle	1
03-15	03062-01	Shaft	1
03-16	00566-64	Adj.shaft	1
03-17	03269-03	Spacer	1
03-18	03067-02	Stop rubber	1
	04752-02	Washer	1
03-19	01056-12	Bushing	1
03-20	03164-06	Seal head assy	1
03-21	00338-09	O-ring	1
03-22	04717-02	Seal	1
03-23	01032-09	Back-up ring	1
	04729-02	Shim	1
03-24	03070-02	Scraper	1
03-25	00128-01	Circlip	1
03-26	03065-02	End cap	1
03-28	03063-01	Bump rubber	1
03-33	00382-01	Screw	1
03-34	00338-01	O-ring	1
03-35	00338-28	O-ring	1
03-36	00305-03	Reservoir piston	1