


Fig 01

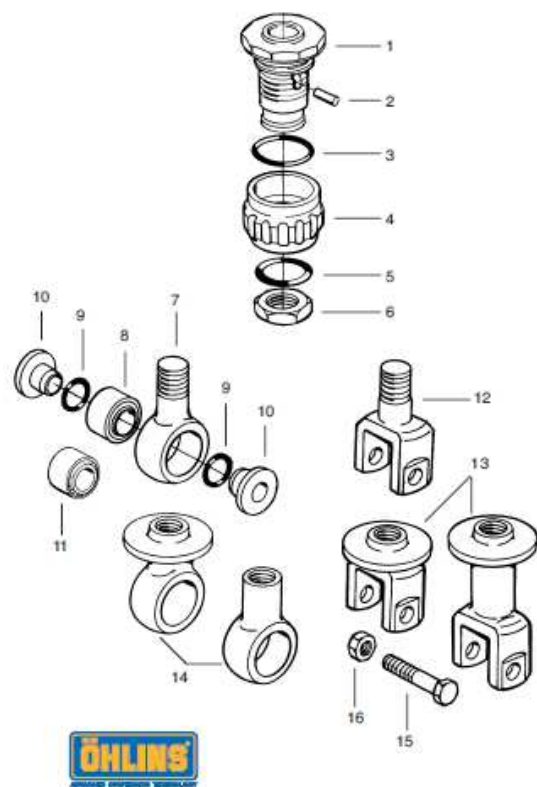


|                | S36PR1C1L | HONDACB 1300/KAWASAKI ZRX 1100 | HO 414 | HO 417 |
|----------------|-----------|--------------------------------|--------|--------|
| Fig no.        | Part no.  | Description                    | Qty    | Qty    |
| <b>End eye</b> |           |                                |        |        |
| 01-01          | 03058-01  | Shaft extension                | 1      | 1      |
| 01-02          | 01030-07  | Pin                            | 1      | 1      |
| 01-03          | 00338-83  | O-ring upper adjustment knob   | 1      | 1      |
| 01-04          | 03057-01  | Adjustment knob                | 1      | 1      |
| 01-05          | 00338-25  | O-ring lower adjustment knob   | 1      | 1      |
| 01-06          | 03059-01  | Nut                            | 1      | 1      |
| 01-07          | 03061-12  | End eye                        | 1      | 1      |
| 01-08          | 00536-04  | Ball joint                     | 1      | 1      |
| 01-09          | 00534-01  | Seal ball joint                | 2      | 2      |
| 01-10          | 01218-15  | Spacer                         | 2      | 2      |

This exploded view diagram illustrates the components of a shock absorber assembly. The parts are numbered as follows:

- 1**: Upper mounting bracket
- 2**: Upper mounting plate
- 3**: Upper mounting pin
- 4**: Upper mounting nut
- 5**: Upper mounting washer
- 6**: Upper mounting spacer
- 7**: Upper mounting seal
- 8**: Upper mounting cap
- 9**: Upper mounting pin
- 10**: Upper mounting nut
- 11**: Upper mounting bracket
- 12**: Upper mounting pin
- 13**: Upper mounting washer
- 14**: Upper mounting spacer
- 15**: Upper mounting seal
- 16**: Upper mounting cap
- 17**: Upper mounting pin
- 18**: Upper mounting nut
- 19**: Upper mounting bracket
- 20**: Upper mounting pin
- 21**: Upper mounting nut
- 22**: Upper mounting bracket
- 23**: Upper mounting pin
- 24**: Upper mounting nut
- 25**: Upper mounting bracket
- 26**: Upper mounting pin
- 27**: Upper mounting cap
- 28**: Upper mounting seal
- 29**: Upper mounting spacer
- 30**: Upper mounting pin
- 31**: Upper mounting nut
- 32**: Upper mounting bracket
- 33**: Upper mounting pin
- 34**: Upper mounting nut
- 35**: Upper mounting bracket
- 36**: Upper mounting pin
- 37**: Upper mounting cap
- 38**: Upper mounting seal
- 39**: Upper mounting spacer
- 40**: Upper mounting pin


|         | S36PR1C1L | HONDACB 1300/KAWASAKI ZRX 1100 | HO 414 | HO 417 |
|---------|-----------|--------------------------------|--------|--------|
| Fig no. | Part no.  | Description                    | Qty    | Qty    |
| Shaft   |           |                                |        |        |
| 02-12   | 00539-01  | Lock nut                       | 1      | 1      |
| 02-14   | 00519-07  | Stop washer                    | 1      | 1      |
| 02-15   |           | Shim stack,see spec card       |        |        |
| 02-16   | 03077-01  | Piston                         | 1      | 1      |
| 02-17   | 03078-01  | Piston ring                    | 1      | 1      |
| 02-18   |           | Shim stack,see spec card       |        |        |
| 02-19   | 03068-01  | Stop washer                    | 1      | 1      |
| 02-20   | 00436-01  | Circlip                        | 1      | 1      |
| 02-21   | 03067-02  | Stop rubber                    | 1      | 1      |
| 02-22   | 03269-02  | Spacer                         | 1      | 1      |
|         |           |                                |        |        |
| 02-24   | 01021-03  | Shaft jet                      | 1      | 1      |
| 02-25   | 00338-14  | O-ring                         | 1      | 1      |
| 02-26   | 01055-03  | Adjustment needle              | 1      | 1      |
| 02-27   | 03164-03  | Seal head assy                 | 1      | 1      |
| 02-28   | 00338-09  | O-ring                         | 1      | 1      |
| 02-29   | 00128-01  | Circlip                        | 1      | 1      |
| 02-30   | 01056-12  | Bushing                        | 1      | 1      |
| 02-31   | 00827-01  | X-ring                         | 1      | 1      |
| 02-32   | 01032-03  | Back-up ring                   | 1      | 1      |
| 02-33   | 03070-01  | Scraper                        | 1      | 1      |
| 02-34   | 03065-01  | End cap                        | 1      | 1      |
| 02-35   | 03062-02  | Shaft                          | 1      | 1      |
| 02-36   | 00566-69  | Adj.shaft                      | 1      | 1      |
| 02-37   | 00480-23  | Spring Black                   | 1      |        |
| 02-37   | 00480-33  | Spring Yellow                  |        | 1      |
| 02-38   | 03063-01  | Bump rubber                    | 1      | 1      |
| 02-40   | 03252-01  | Spring clip                    | 1      | 1      |
| 02-13   | 00578-01  | Washer                         | 3      | 3      |

Fig 03

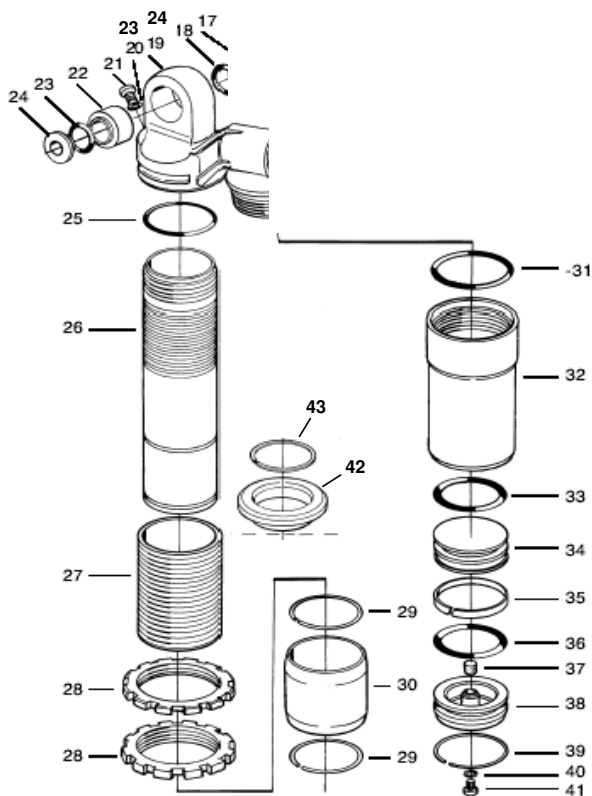

|                  | S36PR1C1L | HONDACB 1300/KAWASAKI ZRX 1100 | HO 414 | HO 417 |
|------------------|-----------|--------------------------------|--------|--------|
| Fig no.          | Part no.  | Description                    | Qty    | Qty    |
| <b>Body tube</b> |           |                                |        |        |
| 03-19            | 03250-01  | Cylinder head left side        | 1      | 1      |
| 03-19            | 03250-02  | Cylinder head right side       | 1      | 1      |
| 03-20            | 00438-33  | O-ring                         | 1      | 1      |
| 03-21            | 00382-07  | Screw                          | 1      | 1      |
| 03-22            | 00536-04  | Ball joint                     | 1      | 1      |
| 03-23            | 00534-01  | O-ring                         | 2      | 2      |
| 03-24            | 01218-54  | Spacer                         | 2      | 2      |
| 03-25            | 00338-02  | O-ring                         | 1      | 1      |
| 03-26            | 04300-15  | Cylinder tube                  | 1      | 1      |
| 03-28            | 03251-01  | Spring platform                | 1      | 1      |
|                  | 05410-02  | Stop crew spring platform      | 1      | 1      |
| 03-30            | 00417-02  | Support sleeve                 | 1      | 1      |
| 03-31            | 00438-26  | O-ring                         | 1      | 1      |
| 03-00            | 00191-01  | Sticker "ÖHLINS" blue/transp   | 1      | 1      |
| 03-00            | 00196-01  | Sticker "Warning"black/transp  | 1      | 1      |
| 03-32            | 00403-02  | Reservoir                      | 1      | 1      |
| 03-33            | 00438-27  | O-ring                         | 1      | 1      |
| 03-34            | 00405-01  | Reservoir piston               | 1      | 1      |
| 03-35            | 00340-03  | Teflon band                    | 1      | 1      |
| 03-36            | 00438-27  | O-ring                         | 1      | 1      |
| 03-38            | 00161-04  | Reservoir top assy             | 1      | 1      |
| 03-39            | 00329-04  | Circlip                        | 1      | 1      |
| 03-40            | 00338-59  | O-ring                         | 1      | 1      |
| 03-41            | 01050-01  | Screw                          | 1      | 1      |
|                  |           |                                |        |        |
|                  |           |                                |        |        |

Fig.04

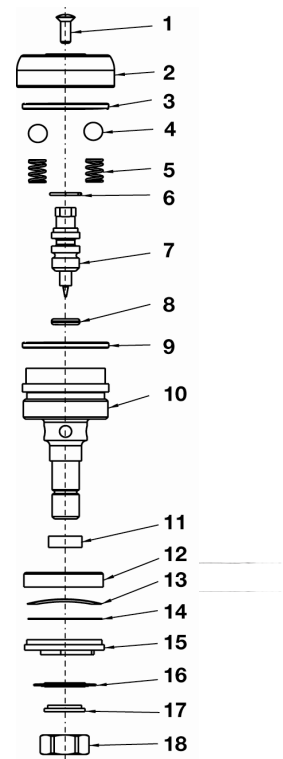

|            | S36PR1C1L | HONDACB 1300/KAWASAKI ZRX 1100 | HO 414 | HO 417 |
|------------|-----------|--------------------------------|--------|--------|
| Fig no.    | Part no.  | Description                    | Qty    | Qty    |
| Comp valve |           |                                |        |        |
| 04-01      | 00828-01  | Screw                          | 1      | 1      |
| 04-02      | 03253-01  | Knob                           | 1      | 1      |
| 04-04      | 00884-07  | Ball                           | 2      | 2      |
| 04-05      | 00833-01  | Spring                         | 2      | 2      |
| 04-06      | 01473-06  | Circlip                        | 1      | 1      |
| 04-07      | 01242-07  | Adjustment needle              | 1      | 1      |
| 04-08      | 00338-79  | O-ring                         | 1      | 1      |
| 04-09      | 00338-27  | O-ring                         | 1      | 1      |
| 04-10      | 01243-10  | End piece                      | 1      | 1      |
| 04-12      | 01247-01  | Check valve housing            | 1      | 1      |
| 04-13      | 01246-01  | Wave washer                    | 1      | 1      |
| 04-14      | 01245-01  | Check valve shim               | 1      | 1      |
| 04-15      | 01244-05  | Valve                          | 1      | 1      |
| 04-16      |           | Shims see spec.card            | 1      | 1      |
| 04-17      | 00641-01  | Washer                         | 1      | 1      |
| 04-18      | 00430-07  | Nut                            | 1      | 1      |